


## User Guide for Smart Control Panel that will install on 2000 It Pumps.

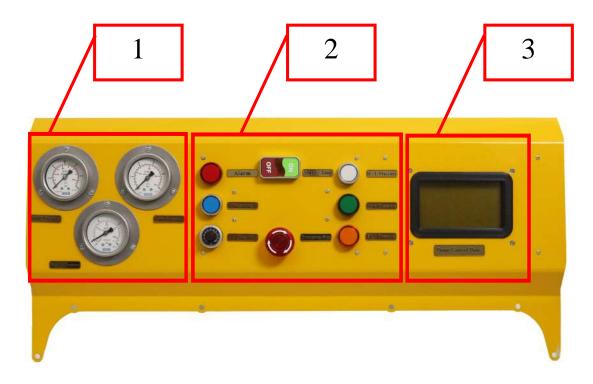

1)Manometers: In this section, there are 2 manometers to show the Pressure of the pump in 2 stages. The first one shows low pressure, the second shows Low pressure.

The range of this manometers are as follow:

Low pressure: 0~25 Bar
Vacuum pressure: -1~15 Bar

2) *Electric switches*: In this section, there are 4 switches, 3 lights and a volume.

All components are describing at below:

• **Start/Stop**: It will use to turn on the LCD and whole switches and use to turn them off.





- **Alarm**: This **Red** light will show the warnings in system and be lit in 3 conditions that are describing at below:
  - When foam tank level is less than 20%
  - When water tank level is less than 20%
  - When the rotational speed is more than 4000 rpm.



• **Vacuum:** By pushing this key, the vacuum mode of the pump will start and you can use it to vacuum water. If the pressure reaches 1 bar, it will automatically cut off the Prime.



• **Gas** +: By this volume, you can increase and decrease R.P.M of the engine without using the gas pedal.

Note: For using this option, you must fill the questionnaire along with the product and send it to us.



❖ Electric connector: Whole wires to connect the panel with sensors and battery are here to use.

Note: For more details of wiring please check the wiring file for each panel(1500,2000 or 3000 lit/min panels.)





❖ Memory Card: It is used to save all parameters in it for doing better aftersales services. It is located backside of LCD shown as bellow.




- 2) LCD: In this section, you can monitor parameters as below:
  - 1. The time that panel already has been turned on.
  - 2. Number of pages that data are saving in memory.
  - 3. Water tank level
  - 4. Foam tank level
  - 5. Warnings

WARNING	R.P.M out of SAFE RANGE
WARNING	Check F.T.L Sensor/Wire
WARNING	Check W.T.L Sensor/Wire
WARNING	Water Tank Near to Empty
WARNING	Foam Tank Near to Empty



6. Rotational speed of pump in R.P.M.

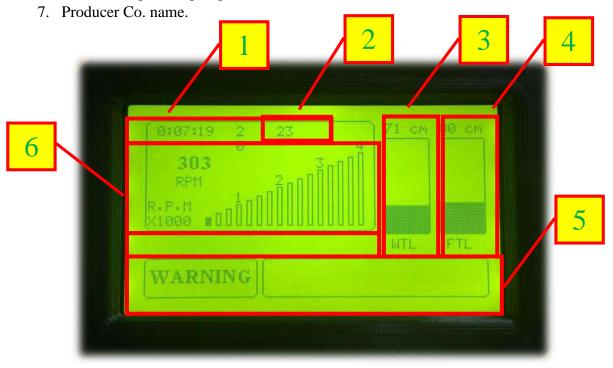

Note: Whole switches, manometers and LCD has Label to help user to find his way on panel.